Operating Manual

Package List

NW-300×1
NT-120× 1
RA-30× 4 (ID1~ID4)
RJ-45 switching cable × 1
RJ-11 switching cable× 1
RJ45- Crocodile clip cable× 1
Warranty Card × 1
Operating Manual × 1

Index

Notice for Use	
Operation Introduction	
Program introduction	
System Setting	
Electrical Specifications and Parameters	

Notice for Use

Warning

To avoid electricity leakage and personal injury, please comply following instruction:

- → Do not use the damaged product.
- \rightarrow Do not use the product near the explosive gas, stream or atomy.
- → No assembly needs to repair by customers. (if the product have any damage, please contact local distributor or our maintenance center which printed on the instruction)

Careful

To avoid the product and tested equipment damage, please comply following instruction:

- → all connection have to use correct cable and connector
- → watch direction of battery installation

Cleaning

Please use slight wet cotton to clean the product, **Do** not use acid, alkali solution.

POWER


The product uses two AA alkaline or NiCd/NiMH rechargeable batteries. Please take out battery if you will not use the product in long time that to avoid battery mal-function and leakage.

 \rightarrow Ps: The product's battery energy capability display function is designed for 1.5v alkaline batteries, and the NiCd/NiMH batteries usually are 1.25v will display 2/4 or 3/4 capability when they are full.

 \rightarrow The product system will shut down if long time not using, and PWR indicator light will turn on.

Operation Introduction:

NW-300 Operation Chart

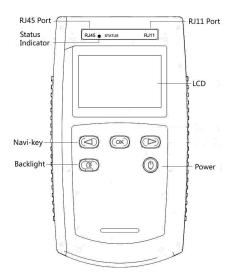

Operation Guide

1. Power

keep press: turn on/off

quick press: cancel/backspace

2. Navi-Key


- → select menu in main interface
- → select cursor, the selected button will display orange
- → OK: confirmation and start-up function
- 3. Back-light:

Open/close LCD light

Peripheral interface and properties

RJ-11 connector is subset of RJ-45 connector.

Inside pairs connection mode as shown as below:

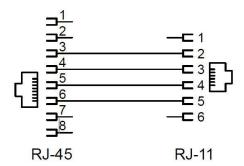

NT-120 Operation Chart



Operation Guide

LED Flash switch: Open/close LED light

Power Switch:

up: Open audio test

mid: MUTE/ LED light indicate

down: shut down

Volume adjuster: adjust level of volume Signal level indicator:include five LED light,

Wire Map test port: RJ-45 port

Program Introduction

Audio tracker

Before you start program, please connector cable correctly, then you can trace cable by work with NW-300E. Users can adjust audio in four different frequency.

This program can support both RJ-45 and RJ-11 test.

Cable ID

After start program, plug another side of cable into RA-30 adapter, user could identify the ID of tested cable. This program can support both RJ-45 and RJ-11(*PSTN*) test.

Tips: NW-300 could support up to 16 ID adapters.

Wire Map

Please plug cable into right RJ-45 port, the other side of cable pulg into RJ-45 port of UTN-01.


Tips: This program could support RJ-11 connector, user could to refer pairs connection mode in **Peripheral interface and properties**.

Loop Resistance Test

This program designed for PSTN/xDSL cable Loop Resistance.

Users can use right RJ-11 or RJ-45 port.

Pairs connection mode as shown as below:

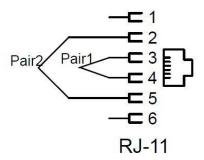

Flash Port

Plug cable connector into left test port, the other port of cable plug into a switch or router port, press Start button to start test. The switch or router's port will flash in a fixed frequency.

System Setting

Sound setting: Press left or right key to choose open/shut sound, press OK key to save the selection.

Back-light Setting: Press left or right key to choose level of back-light, press OK key to save the selection.

System info: Check system version.

Electrical Specifications and Parameters

Output level>=9Vp-p;

10/100/1000M RJ-45 adaptive port;

Test range: $0\sim4000$ ohm, testing error <=1%.

NW-300		
Test Port	RJ-45 x1,RJ-11 x 1	
User Interface	2.0" LCD ,128×64 pixels; LED x1; Keys ×5	
Weight	100g	
NT-120		
Test Port	RJ-45 x1	
User Interface	LED x7	
Weight	85g	
Work Environment	Work environment -10~+40 °C Storage environment -20~+60 °C Work humidity 95% RH (no condensation)	
Power	2 x AA alkaline or 2 x AA NiCd/NiMH batteries	